



(1)

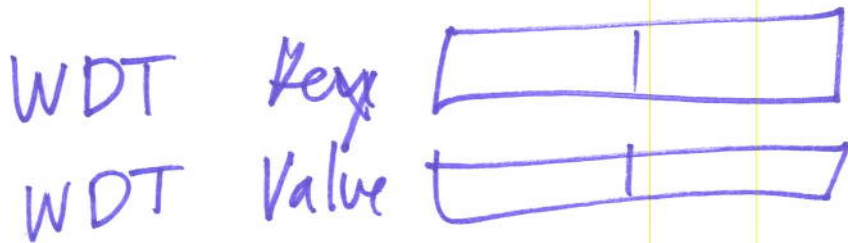

To "kick the dog"

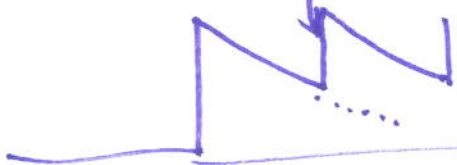

1) Write the correct "Key" into the key value

0xFA17

2) If correct, you will be allowed to write any value in the value register

WDT → specific clock
Determining the "time out" of system.